
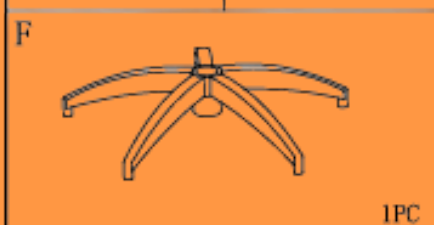
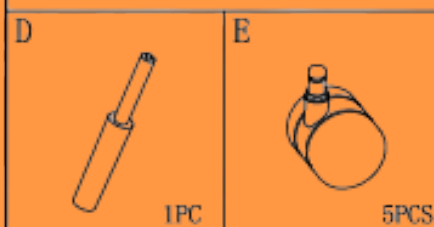
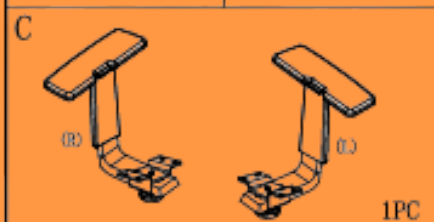



# Assembling Office Chair PC-B05

Please check all the components before install

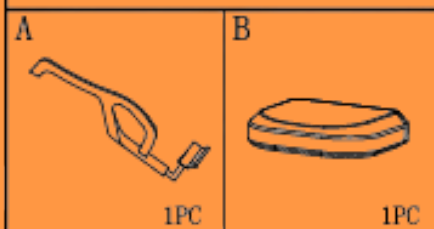


|          |  |       |      |
|----------|--|-------|------|
| <b>G</b> |  | M8*12 | 3PCS |
| <b>H</b> |  | M6*25 | 4PCS |
| <b>I</b> |  | M6*30 | 4PCS |
| <b>J</b> |  | 5mm   | 1PC  |
| <b>K</b> |  | 6mm   | 1PC  |

## STEP1

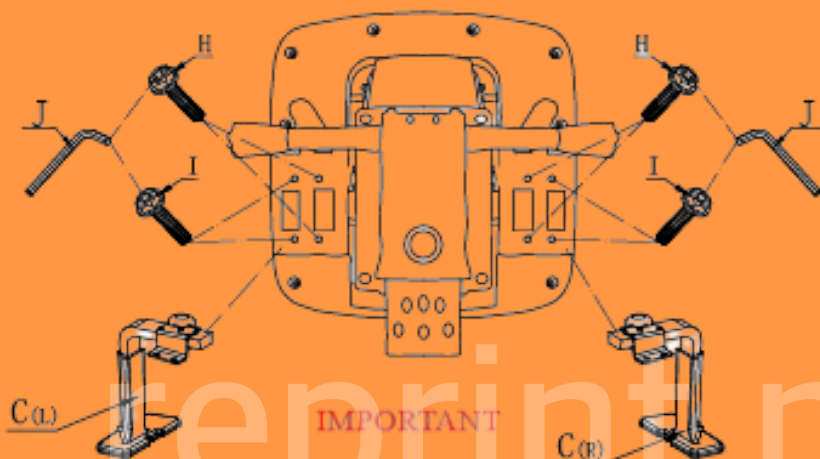


**IMPORTANT**  
Armrests adaptor already assembled.  
Slide armrests into the adaptor and tighten with big black screw


## STEP2

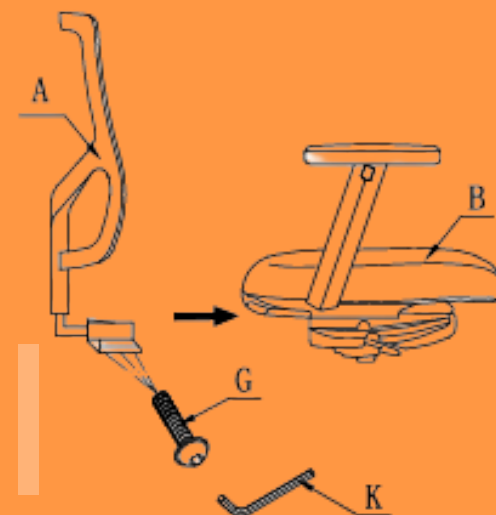

## STEP3

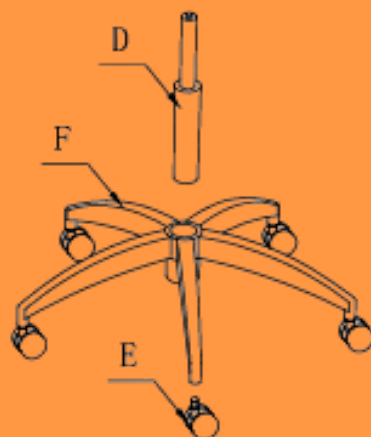

## STEP4

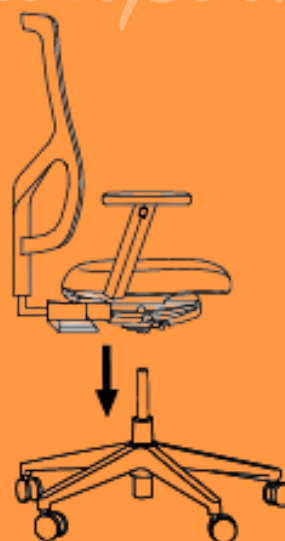

## STEP5

